


**King Headz
TPB-100
TRANSPONDER
PROTECTOR BOX**

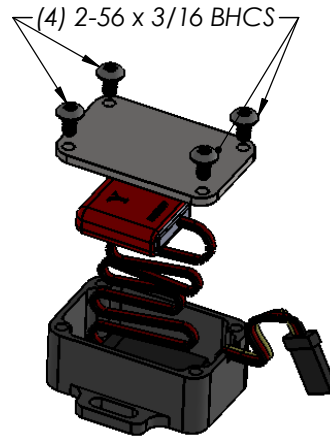

CONNECT THE SERVO EXTENSION ONTO
YOUR TRANSPONDER.

ZIG ZAG THE TRANSPONDER WIRE BACK
AND FORTH MAKING LOOPS JUST AS
LONG AS THE INSIDE OF THE BOX.

PLACE THE EXTENSION CONECTION IN THE
BOTTOM OF THE BOX AND PLACE THE
EXTENSION WIRE INTO THE NOTCH IN
BOX AND LET IT WIRE HANG OUTSIDE.

THEN PLACE LOOPS OF WIRE OFF TO ONE
SIDE AND PLACE THE TRANSPONDER ON
TOP OF THE CONNECTOR THEN CAREFULLY
PLACE THE CLEAR LID ON TOP OF
EVERYTHING AND PRESS IT DOWN TIGHT.

MAKE SURE NONE OF THE WIRES ARE
PINCHED.

INSTALL THE (4) 2-56 BHCS WITH A .05
ALLEN WRENCH. SNUG SCREWS,
DO NOT OVER TIGHTEN.

NOW YOU CAN INSTALL THE BOX
ASSEMBLY INTO YOUR VEHICLE USING
EITHER SCREWS THROUGH THE TWO
SLOTS, VELCRO, TWO SIDED TAPE, OR
ZIP TIES. WHICHEVER YOU DESIRE.